

Stainless Steel Accessories

FRONT AIR CLEANER LIGHT BAR

INSTALLATION INSTRUCTIONS

1. Remove the protective plastic coating from the slotted side of the light bars only.
2. The slots on the light bar should be aligned with the bolts, and moved into proper position between brackets and the side of the truck. (light bar against paint)
3. Once the light bar is in the desired position, tighten both bolts.
4. Remove remaining protective plastic coating.
5. Install grommets, lights, and connect wiring harness.
6. Have a "Certified Technician" make the proper connection from the wiring harness to the trucks electrical circuit.

