

## Stainless Steel Accessories

# AIR CLEANER DISK

### INSTALLATION INSTRUCTIONS

1. Remove the spring loaded air cleaner cover by depressing and twisting it off.
2. Peel the plastic coating from the stainless steel and clean with glass cleaner if necessary.
3. Holding the disk with the lights and the outside tabs facing down, slide the disk under the cover mounting flange in the air cleaner. Align the holes on the outside tabs with the existing holes on the cover mounting flange.
4. Place the 3 separate plates on top of cover mounting flange which correspond to the holes on the disk.
5. Using the supplied #10-32 x 1/2" Truss head screws, clamp the two halves together, sandwiching the cover mounting flange.
6. Be sure to route the wiring through the vent holes before locking the cover back on.

\*\* Using proper wiring protection is recommended (grommets) \*\*

