


Stainless Steel Accessories


LICENSE PLATE HOLDER

INSTALLATION INSTRUCTIONS

1. Loosen countersunk bolts under bumper fairing, allowing enough room to insert license plate holder. (loosen all six bolts for three plate holder)
2. Insert License Plate Holder slots into air dam bolts between bumper fairing and air dam.

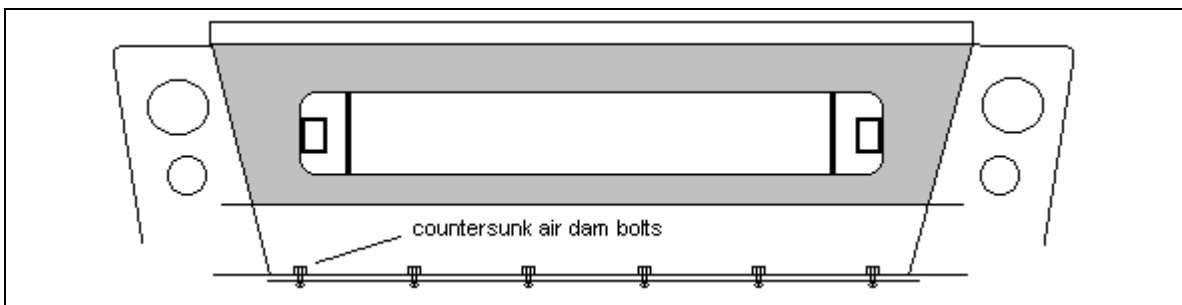

3. Slide top bend of license plate holder over lower lip of bumper opening.
4. When plate holder is in desired position, and mark drill holes.

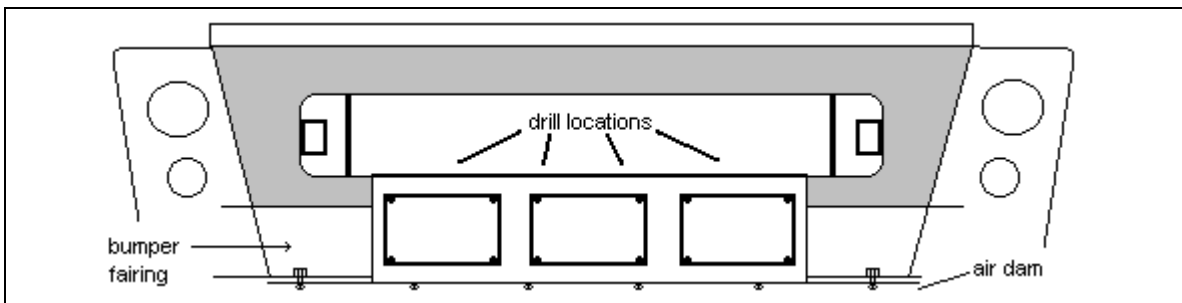

5. Drill 7/32" or 3/16" holes through holes in license plate holder into bumper. (if available, use an "Angle Drill")
6. Using "shorty" Phillips screwdriver, attach supplied hardware.
7. Unclamp top section and tighten air dam bolts.