


Stainless Steel Accessories

WINDOW SHADE, PETERBILT, 2012+

INSTALLATION INSTRUCTIONS

1. Remove mirror from OEM bracket on passenger side. Set hardware and mirror aside.
2. Remove OEM bracket from door by drilling out rivets.
3. Enlarge holes which were drilled out in previous step with Ø25/64" (.390") drill bit.
4. Install nut inserts into drilled holes according to instructions provided.
5. Fasten supplied bracket to door with 3/4" long hex bolts and washers
6. Fasten mirror to supplied bracket with hardware set aside in step 1.

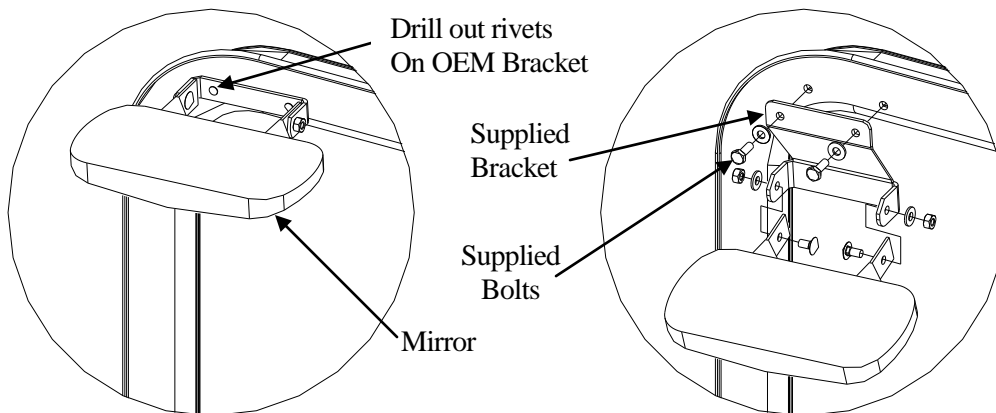

7. Hold window shade up against door and ensure the contour of shade conforms to door.
8. Prepare the mounting surface of the door according to 3M tape instructions provided.
9. Remove the backing of tape from window shade and attach window shade to door ensuring the contour of shade conforms to that of the door. Refer to 3M tape instructions provided to ensure proper adhesion. Rolling down the window and securing the three mounting flanges with spring clamps will help adhesion.

