

Stainless Steel Accessories


HERITAGE SUNVISOR

PREPARATION:

1. Leave protective plastic coating on until last step.

INSTALLATION INSTRUCTIONS

1. Remove existing factory sunvisor and brackets.

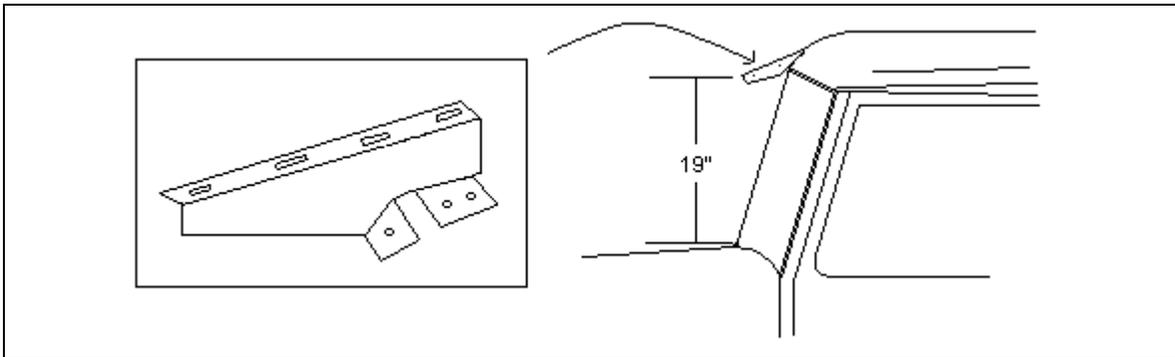

2. Install new brackets in same place as old brackets.
3. Hold center bracket in center of cab above windshield as shown above and mark 6 holes to cab.
4. Drill 6-1/8" holes into cab, apply silicone caulking over the hole area and fasten bracket with supplied screws.
5. Place the visor over top of the brackets, replace the two end bolts through Sunvisor into cab then installing four 10-32 screws and nuts through holes in center bracket and holes at other end of Sunvisor.
6. Install the remaining 1/4" x 1/2" bolts and tighten all fasteners.
7. Remove remaining protective plastic coating.