

STAINLESS STEEL ACCESSORIES

EXTENDER SKIRT, 25 3/4", CORONADO

INSTALLATION INSTRUCTIONS

1. Draw a horizontal line onto the extender panel as shown in figure A. Use a level and ensure the line is aligned with the top of existing stainless steel sleeper skirt.
2. Mark and drill $\text{\O}5/16$ " holes through the extender panel according to figure A.

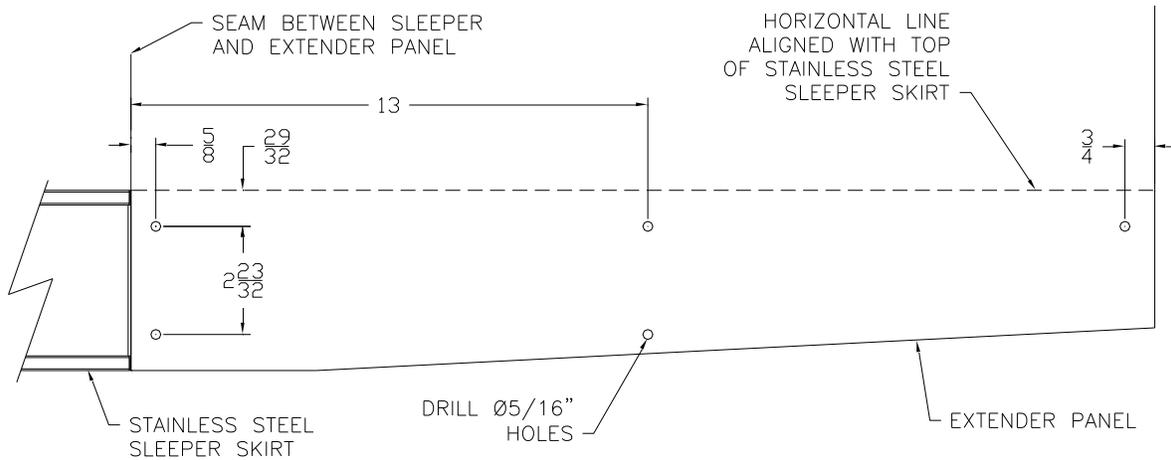


Figure A (driver side shown)

3. Temporarily place stainless steel extender skirt on to truck by inserting studs into previously drilled holes (Note that brackets can slide for adjustment)
4. Using the light holes in the stainless skirt as a guide, mark and drill holes through the extender panel according to figure B.

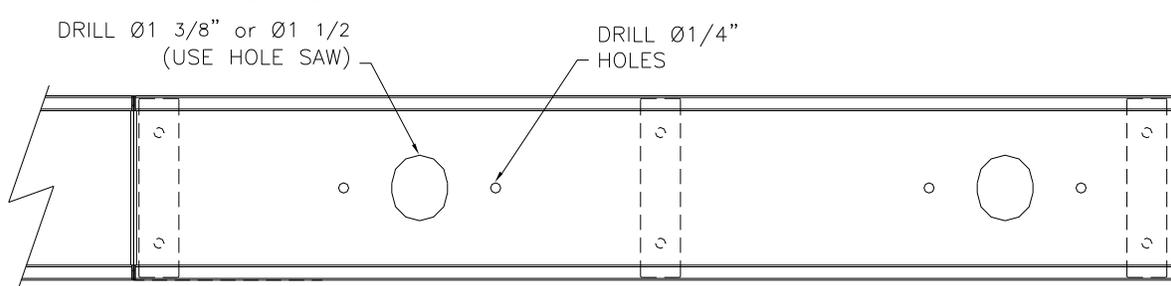


Figure B (driver side shown)

5. Fasten the brackets of extender skirt using supplied $1/4$ " hardware.
6. Fasten light using supplied 10-24 hardware.
7. Attach supplied wiring harness.