

## STAINLESS STEEL ACCESSORIES

### LONESTAR BUG DEFLECTOR

#### INSTALLATION INSTRUCTIONS

1. Remove Plastic coating around all bolt holes.
2. Assemble two halves of Bug Deflector as shown in Fig. 1.

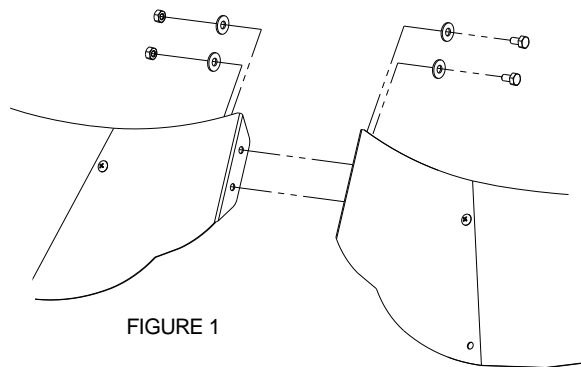



FIGURE 1

3. Attach both grab handles to the backside of the Bug Deflector leaving hardware loose so that the handles can slide freely.
4. Place Bug Deflector on hood directly above the grill bezel. Hold Bug Deflector in desired position, making sure the Bug Deflector is centered over the hood ornament and is following the line of the grill. (Pictured below)



5. Mark two holes for grab handles.
6. Remove grab handles from Bug Deflector. Set Deflector and handles aside.
7. Tilt hood forward.

8. Drill 9/32" holes into pockets in the hood and attach supplied grab handles using 1/4-20 x 1" long hex head bolt, 1/4 washer and 1/4-20 lock nut.
9. Return hood to closed position. Attach Bug Deflector to grab handles.
10. Check to ensure that the Deflector is following the top line of the grille. Mark all eight holes for the Bug deflector.

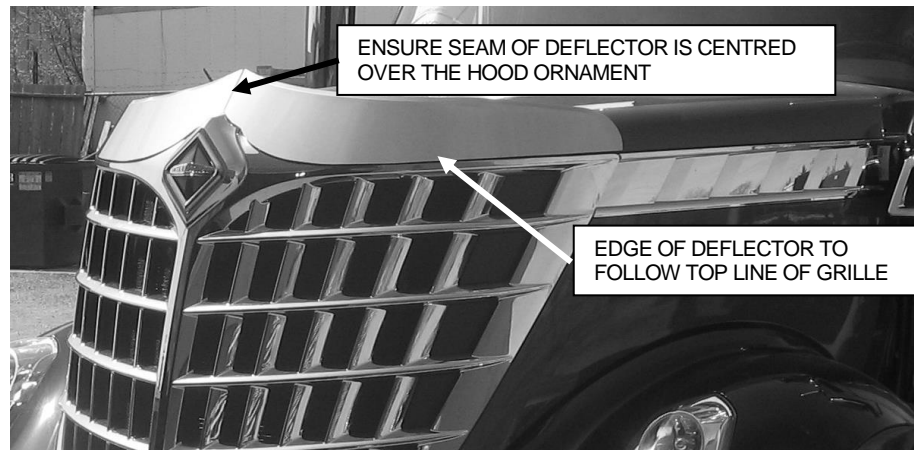

11. Remove Bug Deflector. Drill 1/8" holes at locations marked in previous step.
12. Fasten Bug Deflector loosely to grab handles once more. Ensure that Deflector is centered on hood and over hood ornament. (refer to picture above)
13. Using the #12 x 1" long pan head screws, fasten Bug Deflector to hood.
14. Ensure all hardware is tightened.
15. Remove plastic coating from Deflector.
16. Remove marks with glass cleaner and a soft cloth if necessary.