


## STAINLESS STEEL ACCESSORIES

### SLEEPER SKIRTS

#### INSTALLATION INSTRUCTIONS


1. Peel plastic coating away from edges of Sleeper Skirt and bolt holes.
2. Hold Sleeper Skirt in desired position, flush with outside of sleeper, this will help determine the placement of the brackets.

eg. 1

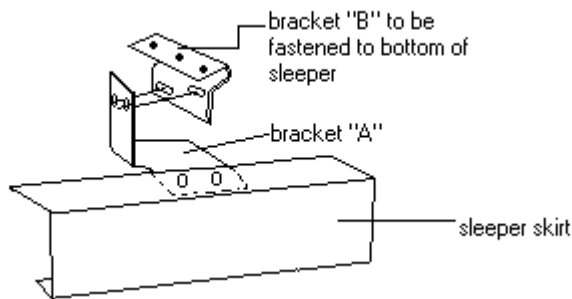


3. The brackets may either be screwed to sleeper floor panel or bolted to sides of cross members.
4. If you fasten the bracket to the floor panel, then drill 1/8" hole into floor and use self tapping screws supplied. When fastening the bracket to cross member drill 1/4" holes and use 1/4" bolts, washers, and nuts. (not supplied)

eg. 2

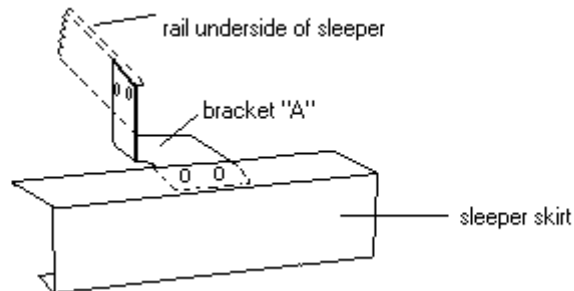

5. Once the brackets are fastened, place the skirt back in position. Mark one hole over center of each bracket on the skirt and drill 7/32" holes through both the bracket and the Sleeper Skirt, fasten with screws supplied.

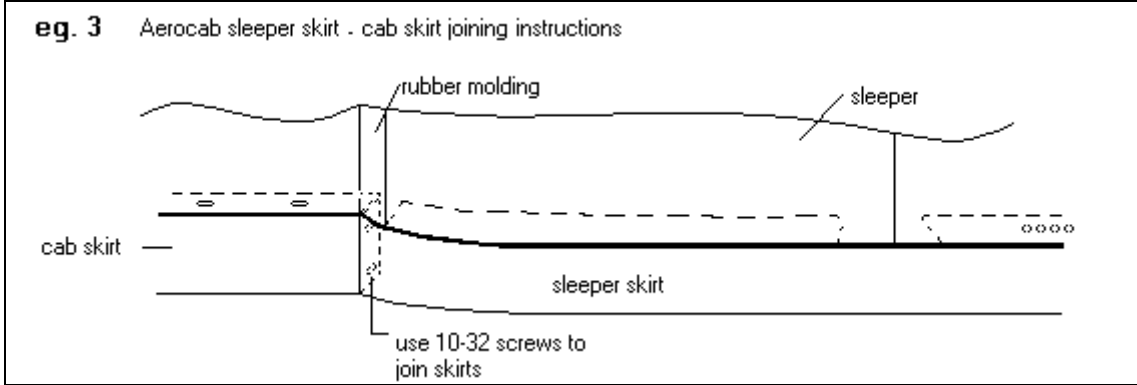

6. The hole at the rear of the sleeper extender must be marked through the rubber trim fastening plate, onto stainless skirt. This hole should be drilled with the 7/32" drill bit, holes must be drilled through extenders and skirt in areas shown in above diagram. Use the 10-32 hardware supplied to fasten.

