


STAINLESS STEEL ACCESSORIES


KENWORTH T660, 2009 LICENSE PLATE HOLDER, TWO PLATE

INSTALLATION INSTRUCTIONS

1. DO NOT REMOVE plastic coating until the last step.
2. Install rubber edge guard to edges shown in figure 1.
3. Install brackets onto license panel as shown in figure 1.

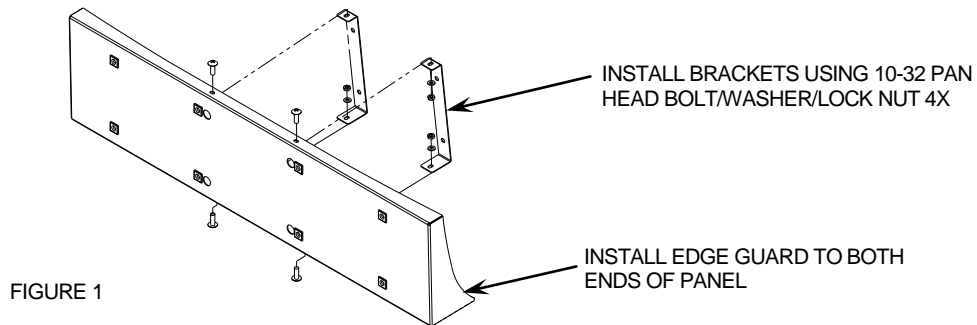

4. Install panel onto bumper lining up with existing holes. (figure 2)

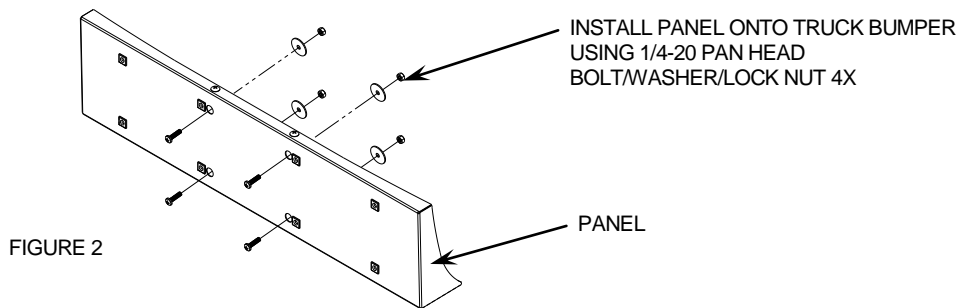

5. Remove plastic film. If necessary, clean with glass cleaner and a soft cloth.
6. Install plates and bezels onto panel using supplied hardware.

