


# STAINLESS STEEL ACCESSORIES


## KENWORTH T680, 2013 LICENSE PLATE HOLDER, TWO PLATE

### INSTALLATION INSTRUCTIONS

1. Do not remove plastic coating until the last step.
2. Install rubber edge guard onto edges shown in figure 1.

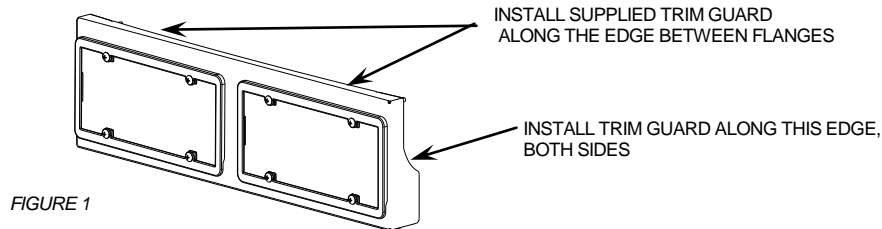

3. Mark and drill bolt hole locations using 9/32" drill bit. The dimensions shown in figure 2 will help ensure proper location. Once this has been done, install 1/4" hardware leaving loose enough to allow the license plate holder to slip behind the washer and head of the bolt. Peel protective plastic from behind mounting flanges.

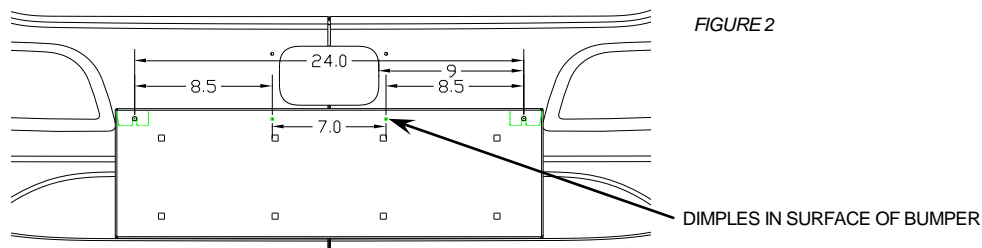

4. Once the license plate holder is securely hanging in place, the bracing brackets can be attached as illustrated below, leaving loose for final adjustments.
5. Drill the underside of the bumper using the 9/32" drill bit where the bracket meets the surface of the underside of the bumper.
6. After all the fasteners are in place and the license plate holder is in the desired position, tighten all hardware.

