


## **UNIVERSAL STAINLESS STEEL ACCESSORIES**

### **CENTER REAR LIGHT BOX**

### **INSTALLATION INSTRUCTIONS**

1. Remove cover panel from rear of light box.
2. Peel back edges of plastic coating on Center Rear Light Box.
3. Remove contents inside Center Rear Light Box, leaving to aluminum flat bar taped to the inside top of box.

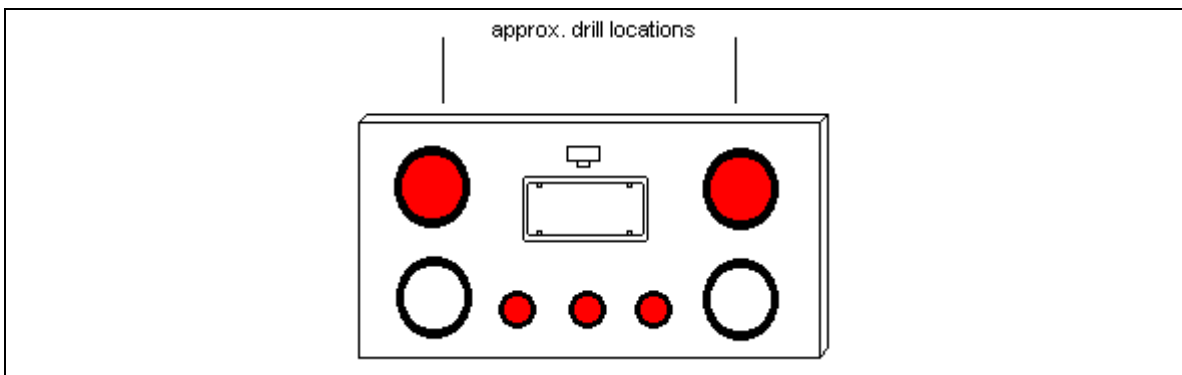

4. Mark areas on light box that are suitable for drilling locations on both the light box and the frame of the truck.
5. Once the area has been determined drill 1/8" pilot holes, then 9/16" bolt holes in the approximate locations on the diagram above.
6. Hold the Center Rear Light Box in the desired position, mark the holes onto the frame and drill the same as step #3.
7. Fasten the Light box with supplied 1/2" bolts, washers, and lock nuts to the frame.
8. Remove the remaining plastic coating.