


## STAINLESS STEEL ACCESSORIES

### CAB PANEL PAIR, MV INTERNATIONAL '19+



#### INSTALLATION INSTRUCTIONS

1. Prepare working space
  - i) No lights: Disassemble upper step from the truck by unfastening (4) T40 torx bolts.
  - ii) With Lights: i) + Disassemble wheel housing for wiring.
2. Mark hold location and drill

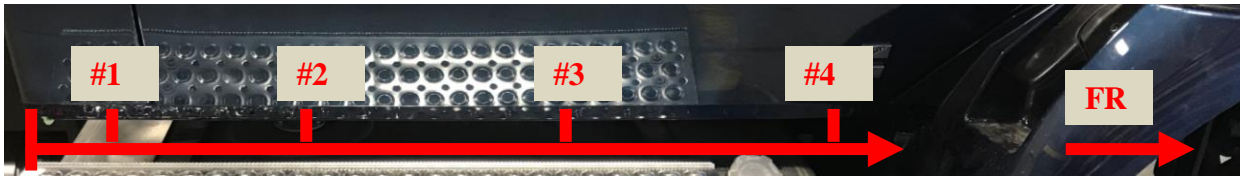

**Figure 1. Hole Location @ Passenger Side**

	#1	#2	#3	#4
L Dimension (From back)	2.25"	13.25"	27.25"	41 5/16"
H Dimension (from bottom)	.469" (15/32")			
Drill bit	7/32		9/32	



**Figure 2. Starting Point of L Dimension**

→ **Adjust hole locations might be necessary depend on trucks**



**Figure 3. 1/4-20 HHSS Pre-Installation @ 1<sup>st</sup> Front(Slot) Hole**

3. Pre-Insert 1/4-20x 3/4 HHSS @ 1<sup>st</sup> front (slot) hole
4. Gently fasten cab skirt with provided fastener. Leave loose for adjustment.
  - i) Only 1<sup>st</sup> front (slot) hole uses 1/4SSFW & LN. Others are 10-32.
5. Align Cab skirt to truck and tighten all bolt & locknuts. Connect wire harness if necessary.

6. Re-install upper step and wheel housing if necessary.
7. Peel all remaining plastic, and clean with glass cleaner as necessary.
8. Repeat process for the other side if necessary.



**Figure 4. Installed Part - Reference Information**