


## STAINLESS STEEL ACCESSORIES

### Classic EXTRA DEEP SUNVISOR

#### INSTALLATION INSTRUCTIONS

1. Leave protective coating on Sunvisor until last step.
2. This Sunvisor is NOT intended for "Mid Roof" applications.
3. Remove stainless steel factory visor from truck leaving brackets on visor.

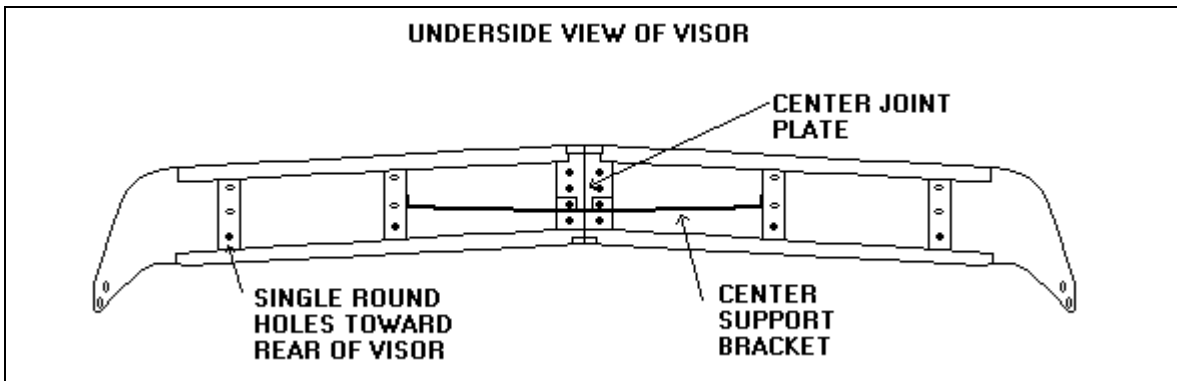

4. Attach new brackets to new Sunvisor halves with single round hole toward rear of Sunvisor. Center joining plate must be attached to both sides of Sunvisor using the same brackets. Leave all screws semi-loose, except for the "top-rear" screws on the brackets, these must be tightened. Brackets must be able to swivel in slots.
5. Place assembled Sunvisor on truck, sliding visor brackets over cab brackets. Insert original bolts through Sunvisor and cab brackets. Make sure center support bracket is also attached to each of the inside brackets.
6. Attach ends of the Sunvisor to cab with original bolts, squeezing a small amount of silicone into bolt holes in cab to prevent water leakage. Making sure the Sunvisor is in the desired position, tighten all bolts and screws.
7. Remove protective coating from Sunvisor.