
Stainless Steel Accessories

DOOR WINDOW DEFLECTOR

INSTALLATION INSTRUCTIONS

- 1. Hold deflector with the three tabs inside of door at the desired location and mark holes.
- 2. Drill three -3/16" dia holes and install as shown below

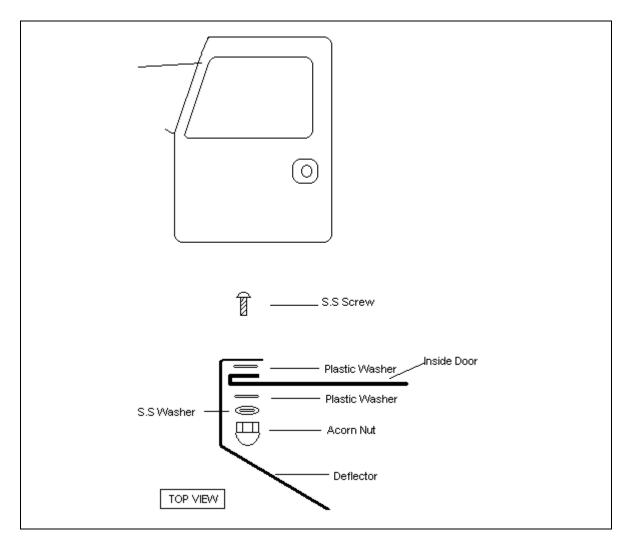

II WS009 ISSUED DEC 02/05