


Installation Procedure:

1. Remove the mirror from passenger side.
2. Attach the supplied bracket to the truck as shown. Do not tighten fully. Leave a gap of about 1/8" between the bracket and the truck body.
3. Slide the window shade into the gap between the bracket and truck body. Hold the shade up against the door and align properly. Mark the truck with pencil as a guide for installation.
4. Remove shade and prepare the mounting surface of the door according to instructions provided.
5. Remove the backing of tape from the shade and attach it to the door using pencil marks as a guide, while also ensuring the shade is tucked in between the bracket and truck body (applying pressure for sufficient period of time will help adhesion of two sided tape)
6. Fully tighten the supplied bracket to the truck.
7. Attach the mirror to the supplied bracket as shown.
8. Repeat for driver side, fastening only with 3M tape as the driver side has no mirror.

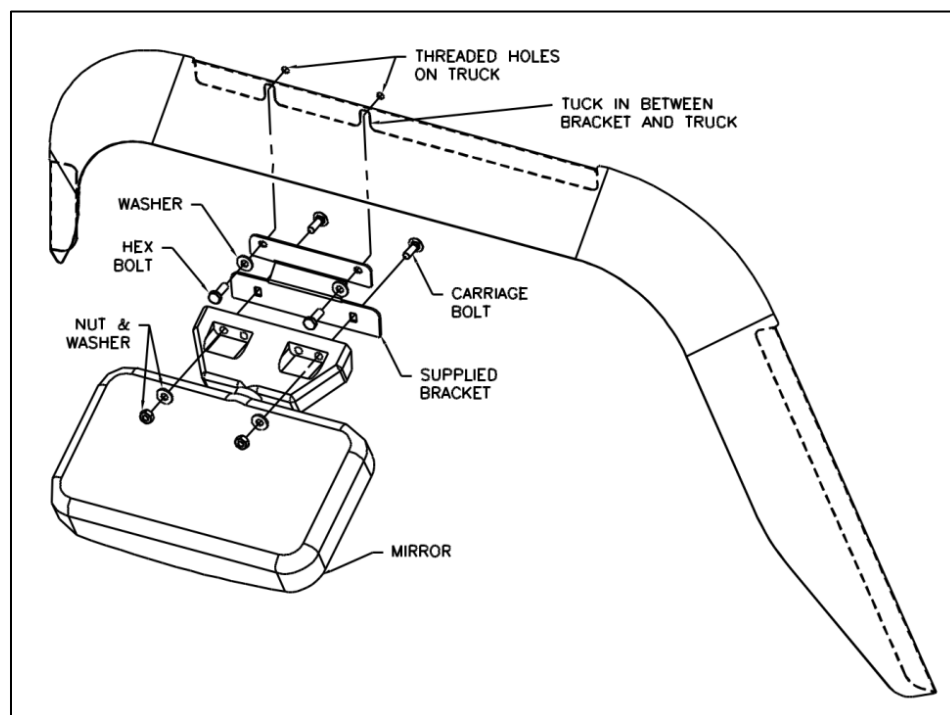

Instructions d'installation:

1. Retirez le miroir du côté passager.
2. Fixez le support fourni sur le camion tel qu'indiqué. Ne pas serrer complètement. Laissez un espace d'environ 1/8" entre le support et la carrosserie du camion.
3. Faites glisser le pare-soleil de fenêtre dans l'espace entre le support et la carrosserie du camion. Tenez le pare-soleil contre la porte et alignez-le correctement. Marquez le camion avec un crayon comme un guide pour l'installation.
4. Retirez le pare-soleil et préparez la surface de fixation sur la porte selon les instructions fournies.
5. Retirez le papier protecteur de la bande adhésive du pare-soleil et fixez-le sur la porte en vous référant aux marques de crayon comme guide, tout en vous assurant que le pare-soleil soit bien inséré entre le support et la carrosserie du camion (appliquez une pression pour un temps suffisant pour permettre l'adhésion de la bande à double-face)
6. Serrez complètement le support fourni sur le camion.
7. Posez le miroir sur le support fourni, comme indiqué.
8. Répétez pour le côté conducteur, en fixant seulement avec le ruban 3M puisque le côté conducteur n'a pas de miroir.

