




Phone: 519 -884-8555  
Toll Free: 1-877-884-8555

## TANK COVER INTERNATIONAL LT

### INSTALLATION INSTRUCTIONS

1. Hold the new panels in the desired location. Using a pen or pencil, mark all hole locations on the truck. Re-mark all holes if one is too close to an edge
2. Drill 1/8" pilot holes first, then use a 7/32" (Ø.219") drill bit to finish each hole
3. Attach panels to the truck with the supplied 10-32 hardware
4. Tighten all screws, but DO NOT OVER TIGHTEN
5. Peel all remaining plastic, and clean with glass cleaner as necessary

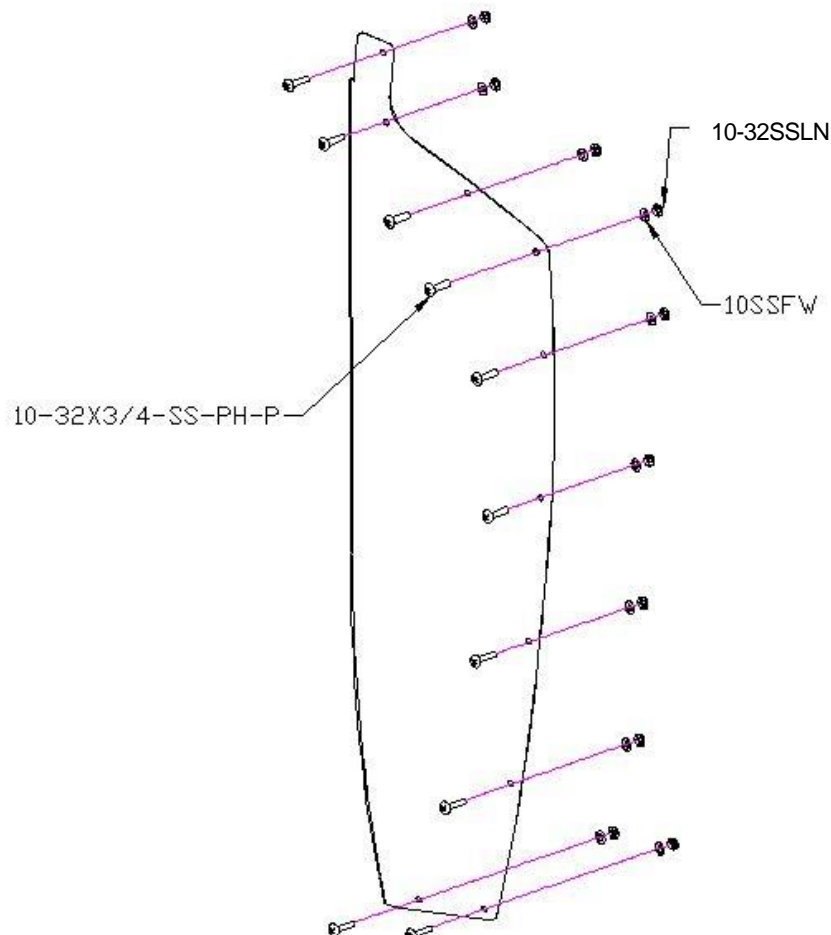

## COUVRE-RÉSERVOIR INTERNATIONAL LT

### INSTRUCTIONS D'INSTALLATION

1. Maintenez les nouveaux panneaux à l'emplacement souhaité. À l'aide d'un crayon ou d'un stylo, marquez tous les emplacements de trous à percer sur le camion. Refaites les marques de trou si l'un d'eux est trop près d'une bordure de la carrosserie.
2. Percez d'abord des trous-guides de 1/8", puis percez chaque trou avec une mèche de 7/32" (Ø.219")
3. Fixez les panneaux au camion avec la quincaillerie 10-32 fournie
4. Serrez toutes les vis, mais NE PAS TROP SERRER.
5. Retirez la pellicule plastique, et nettoyez avec un nettoyant à vitre si nécessaire.

