

FREIGHTLINER NEW CASCADIA – AIR INTAKE GRILLE

INSTALLATION INSTRUCTIONS

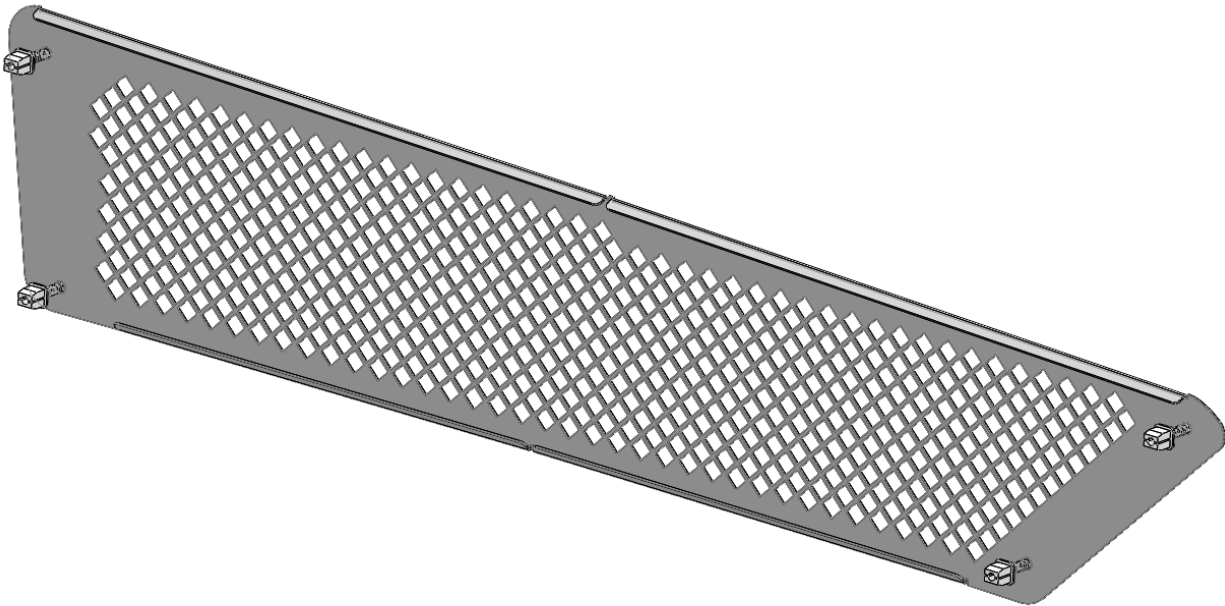


Figure 1

Installation Steps

1. Remove OEM plastic grille by removing (2) T30 screws and pulling grille off.
2. Insert plastic nuts (included) into locking tab slots on truck
3. Position new grille in place
4. Install screws into plastic nuts