

## STAINLESS STEEL ACCESSORIES


# FRONT AIR CLEANER LIGHT BARS, 9900 SERIES

### INSTALLATION INSTRUCTIONS

1. Starting on the driver's side, apply masking tape to the air cleaner can mounting straps in the region where the light bar bracket will pick up on.
2. Position the air cleaner light bar assembly such that the vertical edge of the light bar is parallel to the edge of the air cleaner can. Also make sure the "C" notch on the outside of the light bar fits nicely around the air cleaner can lip. On the inside of the air cleaner light bar, there is a circular relief cutout which allows it to fit snugly around the air intake hose. (see picture below for clarification)
3. Using a marker, transfer the location of the required mounting holes to the masked air cleaner can mounting straps.
4. Drill pilot holes in the marked locations with  $\varnothing 1/8$ " drill bit, then enlarge the holes with  $\varnothing 9/32$ " drill bit and remove previously applied masking tape.
5. Install light bar assembly using the provided hex head hardware.

**\*Note: the bracket mounting feet are slotted to allow for slight adjustment as necessary.**

6. Repeat procedure for passenger side of truck.
7. Make necessary wiring connections and clean with glass cleaner as needed.

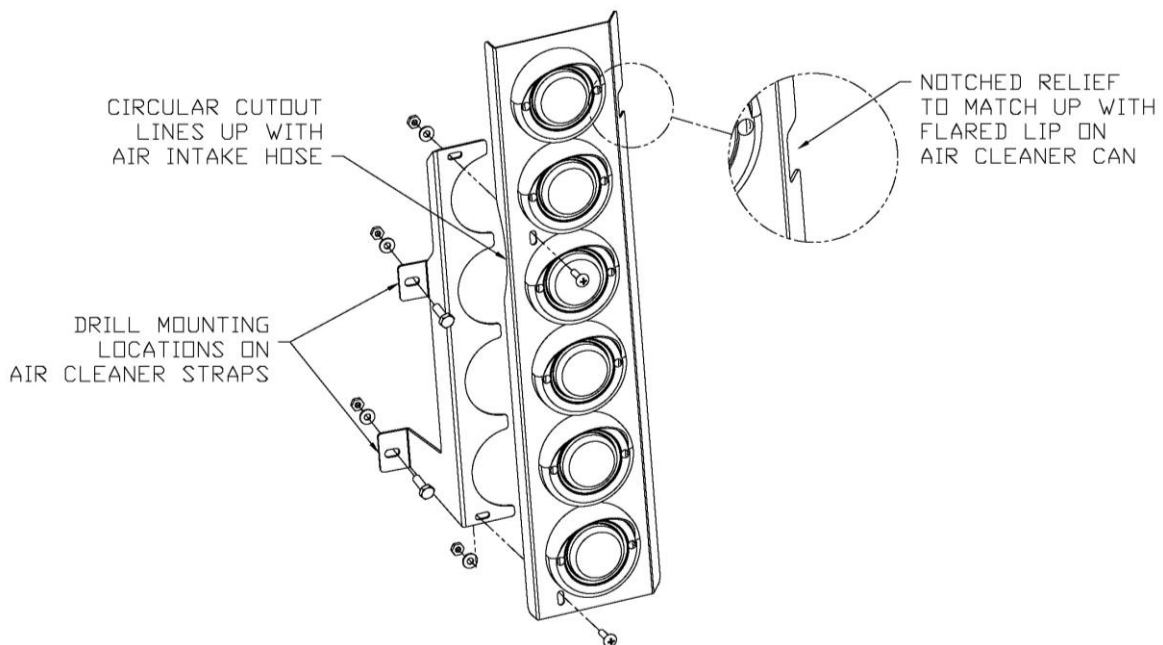

DRIVER SIDE SHOWN – PASSENGER SIDE IS MIRROR