

STAINLESS STEEL ACCESSORIES

INTERNATIONAL HV 2018+ CAB SKIRT W/O or W/BOOSTER BATTERY CUTOUT

INSTALLATION INSTRUCTIONS

1. Remove existing cab panels.
2. Install driver side of cab panel with factory fasteners.
3. Passenger cab panel W/O Booster battery cutout
 - ➔ Install passenger side of cab panel with factory fasteners.

3-1. Passenger cab panel W/ Booster battery cutout

- ➔ Pre-assemble passenger side of cab panel & skirt bracket with provided fasteners. Leave loose for adjustment.

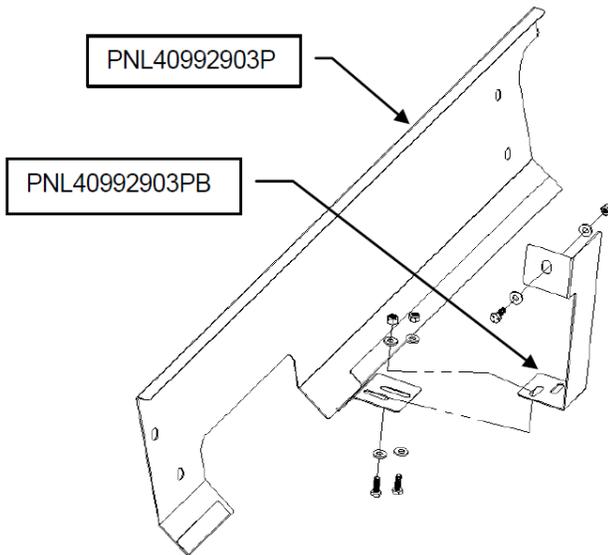


Figure 1. Exploded View @ Passenger Side

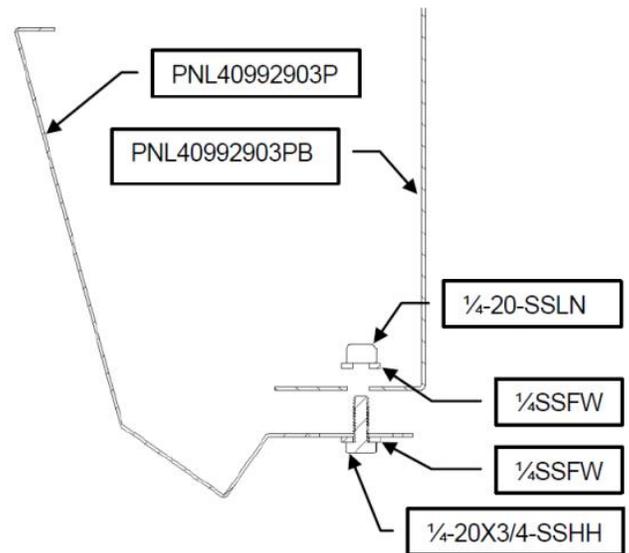


Figure 2. Assembly Detail View

- 3-2. Install passenger side of cab skirt and align it to truck and tighten all bolts & nuts.
4. Remove protective coating and clean with glass cleaner and soft cloth, if required.