


## STAINLESS STEEL ACCESSORIES

### M2 BUG DEFLECTOR

#### INSTALLATION INSTRUCTIONS

1. Pull back plastic coating from the bottom edge of the bug deflector approx.  $\frac{1}{2}$ "
2. Install rubber channel to bottom edge to protect from scratching.
3. Remove rubber grab handle by removing grill to access hardware.
4. Insert rubber grab handle studs through stainless steel grab handle and replace.
5. Attach side brackets (marked Driver or Pass) and center bracket with slots to the backside of the bug deflector.  
Do not tighten 10-32 screws with locknuts all the way. Allow brackets to slide freely.

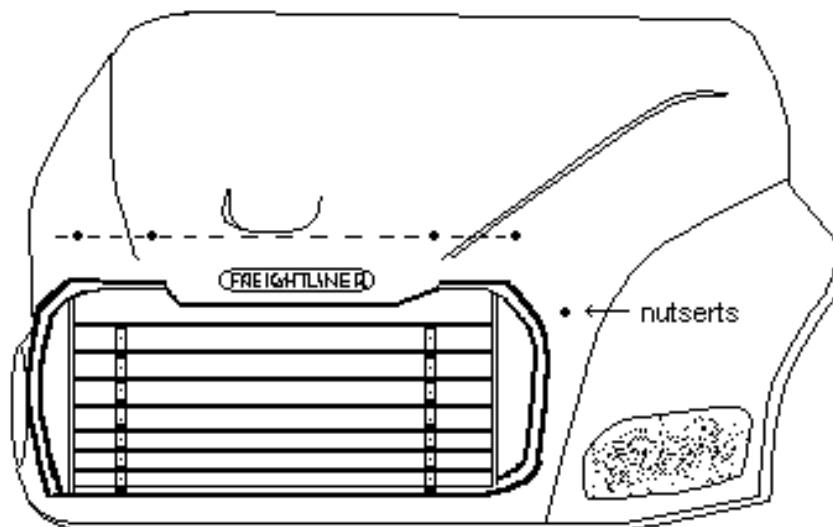

6. Place bug deflector on hood against grab handle and mark bracket holes on hood.
7. Set bug deflector aside.
8. Drill top four holes  $\frac{9}{32}$ " dia. into hood making sure brackets are even.
9. Place bug deflector on hood and fasten brackets.
10. Pull each end of bug deflector tight against hood and mark the two end holes.
11. Drill  $\frac{25}{64}$ " dia. holes at each of the end holes marked on hood.
12. Set nutserts  $\frac{1}{4}$ " – 20 using tool supplied.
13. Attach remaining hardware, and tighten, then pull off remaining plastic coating.

## STAINLESS STEEL ACCESSORIES

### HARDWARE:

1. Passenger side bracket	5. 6 - #10-32 x 1/2" truss head	9. 14 - 1/4" Flatwashers
2. Driver side bracket	6. 6 - #10 Flatwashers	10. 8 - Nylon Flatwashers
3. Bug Deflector	7. 6 - #10 Locknuts	11. 6 - 1/4" Locknuts
4. Grab Handle	8. 6 - 1/4-20 x 1 Hex Head	12. 2 - 1/4-20 x 1 truss head

