

### INSTALLATION PROCEDURE:

**\*\*important\*\***

**Air cleaner light bar must be installed first if the light bar will be installed with the intake shroud.**

1. Clean the area where the new intake shroud will be mounted and lock the hood on both sides.  
Installing the shroud without locking the hood may cause collusion of shroud and air cleaner light bar when hood is locked.
2. Place the paper template on the hood with tape.
3. Hold the part up and roughly align the mounting holes to template.  
Use the template only as a guide to find approximate location.
4. Confirm if the gap between the Intake Shroud and the hood is consistent.  
Use the step/notch on the shroud as a guide to see if the intake shroud is placed at right height.

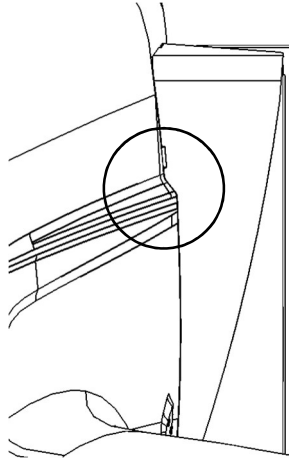


Figure 1. 520 hood

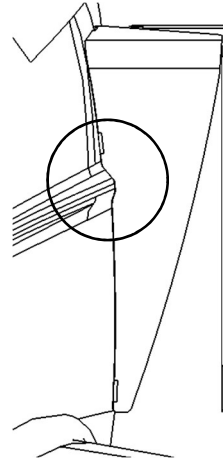


Figure 2. 620 hood

5. Mark the new hole locations if changed.
6. Open the hood and drill the holes with 1/4" drill bit.  
Hood does not have to be fully open, but make sure there is nothing behind.
7. Remove the paper template.
8. Loosely install the supplied 1" long 1/4-20 bolts on center and bottom holes.
9. Remove the plastic coatings on the tabs of the shroud.
10. Slide the shroud so bolts hook on to slots, and fasten the center bolt enough to prevent the shroud from falling off.  
Keep the edge of the shroud away from the hood as you slide. If this is hard, loosen the bolts for more space.
11. Install the 1" long 1/4-20 bolt on top hole, and fully tighten in order of: top, center, and bottom.
12. Remove remaining protective plastic coating.