


STAINLESS STEEL ACCESSORIES

KENWORTH T700, 2011 HEADLIGHT TRIM

INSTALLATION INSTRUCTIONS

1. Position the trim in place under the headlight and ensure proper alignment.
2. Slight manipulation and/or twisting of part is required to achieve proper fit with contour of the truck (see diagram)
3. Attach part to truck with two sided tape (refer to taping instructions provided)
4. Drill through body of truck in 3 locations as shown on diagram.
5. Fasten with hardware provided.

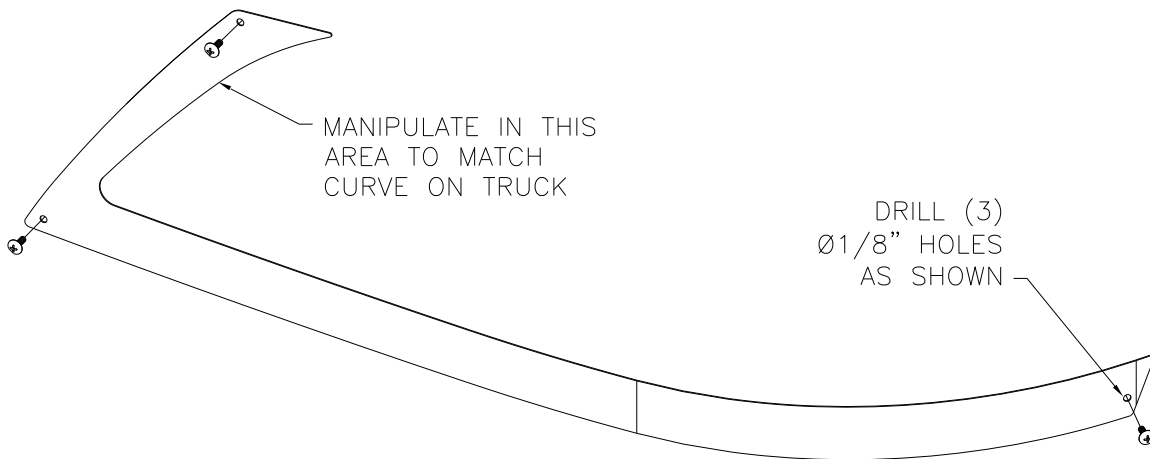

Note: Driver side shown