


Stainless Steel Accessories

CH/CL Mack SUNVISOR

INSTALLATION INSTRUCTIONS

1. Remove Plastic coating around all bolt holes.
2. Mark holes for each bracket as shown.

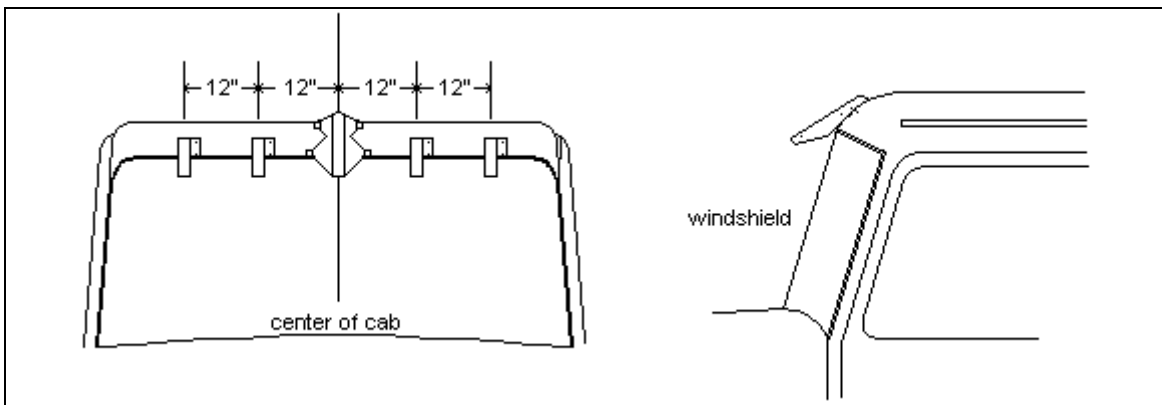

3. Drill holes with 1/8" drill bit. Cover the underside of the bracket with silicone caulking. Tighten brackets with the metal screws supplied.
4. Place both Sunvisor halves on brackets, overlap on the center, and slot around eaves trough. Drill 1/8" holes at the end of the Sunvisor into the cab and tighten with metal screws and caulking.
5. Drill 4 holes through center bracket, and 3 holes through each side bracket and Sunvisor. Use 3/16" screws and locknuts to tighten.
6. Make final adjustment and remove protective plastic coating from Sunvisor.